


EAN: 4015474139718
static.hansa.com/57092201

Náhradné diely

SP57092201

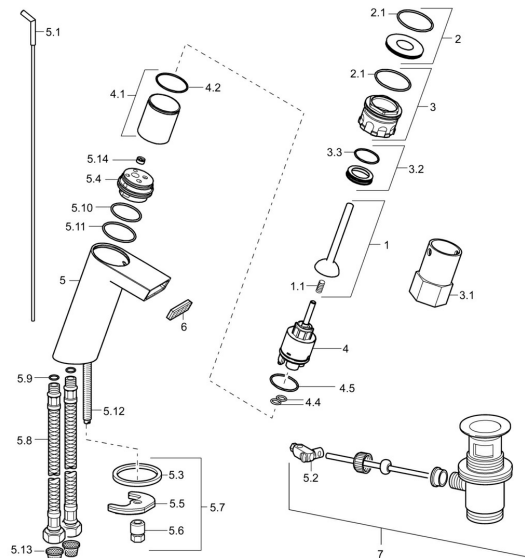

	Názov	Kód
1	Ovládacia rukoväť Chróm	59913090
1.1	Spring clip	59913091
2	Dekoratívne krúžok	59913088
2.1	O-krúžok, d 40x2	59911507
3	Upevňovacia skrutka, M44x1 AF34	59913089
3.1	Socket wrench, SW34	59913092
3.2	Dištančný krúžok	59913096
4	Kartuš, 3.5 Joystick	59913051
4.1	Spacer sleeve	59913093
4.4	O-krúžok, d 10.10x1.60 Ukončené	59905072
4.5	O-krúžok, d 28.24x2.62 Ukončené	59912590
5.1	Ovládacie tiahlo Chróm	59912527
5.2	Spojovací diel tiahla	59904624
5.3	Tesnenie, 43x37x3	59912506
5.5		59904765
5.6	Skrutka, M8x1, SW13	59904766
5.7	Upevňovací set	59910749
5.8	Flexibilná hadička, L=430, G3/8-M10x1	59912515
5.9	O-krúžok, d 7.65x1.78	59902337
5.10	O-krúžok, d 32x2	59912803
5.12	Upevňovacia skrutka, M8x1, L=140	59912474
5.13	Čistiaci filter	59911684
5.14	Regulátor prietoku, 8L/min	59913095
6	Aerator a kľúč, 6 l/min	59913094
7	Vypúšťací ventil umývadla Chróm	59904620
N.I.	Kľúč k aerátoru	59913757